



Royer Labs

Model SF-24V

**Vacuum Tube, Stereo
Ribbon Velocity Microphone**

Operation Instructions Manual
& User Guide

Made in U.S.A.

TABLE OF CONTENTS

Model SF-24V Ribbon Microphone

Revised 2009

| | |
|---|-----------|
| Introduction | 3 |
| <i>SF-24V Vacuum Tube Stereo Ribbon Microphone</i> | 3 |
| Active & Vacuum Tube Ribbon Technology | 3 |
| Description | 4 |
| Applications | 4 |
| Ribbons in the Digital World | 5 |
| User Guide | 5 |
| <i>Using the SF-24V Vacuum Tube Stereo Ribbon Microphone</i> | 5 |
| Operation | 6 |
| Using the RSM-24 Shock Mount Accessory | 7 |
| <i>Description</i> | 7 |
| <i>Features</i> | 7 |
| <i>Usage</i> | 7 |
| <i>Properly Inserting the Microphone into the Shock</i> | 7 |
| <i>Removing the Microphone from the Shock</i> | 8 |
| <i>Connecting the SF-24</i> | 8 |
| Power Supply Input Module | 9 |
| <i>Fuse Replacement</i> | 9 |
| <i>Voltage Changeover</i> | 9 |
| Amplification Considerations | 10 |
| Stereo Microphones and Ground Loops | 11 |
| <i>Equalization and Ribbon Microphones</i> | 12 |
| <i>Hum, Noise and Mic Orientation</i> | 12 |
| Microphone Techniques | 13 |
| <i>General Tips for Using the Royer SF-24V</i> | 13 |
| Specialized Stereo Recording Techniques | 16 |
| <i>Classic Blumlein Technique</i> | 16 |
| <i>Mid-Side (M-S) Technique</i> | 16 |
| Care and Maintenance | 18 |
| <i>Care for the Satin Nickel Finish</i> | 18 |
| <i>Care for the Optional Optical Black Finish</i> | 18 |
| <i>Care for the SF-24V's African Padouk Presentation Case</i> | 19 |
| Features | 19 |
| Specifications | 20 |
| Polar Pattern | 21 |
| Frequency Response | 21 |
| Wiring Diagram | 22 |
| Warranty | 23 |

Introduction

SF-24V Vacuum Tube Stereo Ribbon Microphone

Congratulations on your purchase of a Royer Labs model SF-24V vacuum tube stereo ribbon microphone. The SF-24V is a handcrafted precision instrument, capable of delivering superior sound quality and exceptional performance. The SF-24V represents a new level of performance for ribbon microphones, combining sophisticated technological advancements with old-world craftsmanship. The SF-24V incorporates two independent head amplification systems that utilize proven vacuum tube technology. This enables the SF-24V to deliver the same sensitivity that the recording industry has grown accustomed to with modern condenser microphones. The amplifying circuits are not limited by a 48-volt phantom power source, thus allowing the SF-24V to deliver superior headroom. In addition, the electronic circuitry completely isolates each ribbon element from impedance mismatches, short circuits and other anomalies that can degrade microphone performance or damage the sensitive ribbon elements.

This instruction manual describes the SF-24V, its function and method of use. It also describes the care and maintenance required to ensure proper operation and long service life. The User Guide section of this manual offers practical information designed to maximize the performance capabilities of this microphone.

Royer Labs products are manufactured to the highest industrial standards using only the finest materials obtainable. Your model SF-24V went through extensive quality control checks before leaving the factory. Normal care is all that is required to assure a lifetime of trouble-free service.

Please read this manual thoroughly in order to become familiar with all of the SF-24V's capabilities. It will assist you in making the most of your microphone's superior acoustic properties. This manual is a handy reference guide and we suggest you refer to it whenever questions arise on the use and care of your SF-24V vacuum tube ribbon microphone.

Active & Vacuum Tube Ribbon Technology

The heart of the SF-24V is its proprietary electronic system consisting of specially designed toroidal transformers and electronic buffering stages. This system provides excellent frequency response, extremely low noise and distortion, and high SPL handling (130 dB) without the use of pads. It gives the SF-24V an output level comparable to that of condenser microphones, and its buffer stages provide a low impedance output and present a perfect impedance load to each of the ribbon elements. Standard passive ribbon microphones suffer substantially degraded frequency response and lowered gain when they are paired to a preamp with too low an input impedance. With the SF-24V's active vacuum tube electronics, the microphone's frequency response and output are much less affected by variations in the input impedance of the following preamp.

Description

The SF-24V vacuum tube stereo coincident ribbon microphone is the only microphone of its kind available, combining high audio performance with outstanding separation and imaging. It is a modern ribbon design, with no audible diffraction effects or cavity resonance. The SF-24V's active electronics produce an output comparable to phantom powered studio condenser microphones and because the ribbon elements are electronically isolated from the outside world, the possibility of ribbons becoming damaged as a result of faulty wiring, brownouts or phantom power supply defects is virtually eliminated.

The SF-24V is a compact, stereophonic ribbon microphone array consisting of two matched microphone elements that are placed one above the other. Each transducer is positioned at 45° to the left and right of center, or 90° from each other. When held vertically, connector down and the “ROYER” logo facing the sound source, the upper transducer is OUTPUT 1 and the lower transducer is OUTPUT 2, from the perspective of an observer behind the mic. The microphone elements are each bidirectional (figure-8) and may be addressed from either side with equal sensitivity. The in-phase signals are achieved when the microphone is addressed from the front, as indicated by the “ROYER” logo. If, however, the microphone is suspended upside down, the connections to the preamplifier should be reversed since what was the left transducer is now responding to signals from the right and vice versa.

Your SF-24V is supplied with a dedicated power supply and 7-pin microphone interface cable. The output for each channel consists of a chassis mounted 3-pin male XLR connector. These are identified as OUTPUT 1 and OUTPUT 2, and correspond to the lower and upper transducers, respectively.

The SF-24V is reasonably tolerant of shock and vibration, but care should be taken to prevent accidental stretching of the ribbon elements due to rough handling. This is covered in the Care & Maintenance section of this manual. The performance of the microphone is unaffected by changes in temperature or humidity.

Applications

The SF-24V is a highly versatile microphone, ideally suited for a wide range of critical recording applications. From drums, acoustic stringed instruments and stereo vocals to ensembles like big band, orchestra and jazz groups, your SF-24V will capture performances with uncanny realism and a beautifully full stereo image.

Because of the SF-24V's coincident crossed figure-8 pattern, M-S (mid-side) recording from one microphone is easily achievable. Once a recording has been completed using the proper orientation, the sound field can be adjusted from pure monophonic to “super wide” or exaggerated when compared to crossed figure-8's.

Although spaced microphones can produce similar stereophonic results, such recordings when summed to mono can suffer from “comb filter” effects: peaks and dips in the frequency response. When the SF-24V is used for M-S recording, the feeling of space changes but the sonic quality does not. For more detailed information on the M-S technique, see the chapter Recording Techniques: Mid-Side (M-S) Recording in this manual.

Ribbons in the Digital World

Digital recordings benefit greatly from the properties inherent in ribbon microphones. Since A to D converters cannot distinguish between the sound source being recorded and the complex distortion components often associated with condenser microphones, they sometimes have difficulty tracking the signal, resulting in ringing and edgy-sounding tracks. With ribbon microphones, ringing is almost nonexistent due to the ribbon’s lack of distortion artifacts and high frequency peaks. A to D converters have less difficulty tracking the ribbon generated signal, resulting in very smooth digital recordings free of microphone-related edginess.

User Guide

Using the SF-24V Vacuum Tube Stereo Ribbon Microphone

The head amplification system utilized in the SF-24V consists of two independently configured military grade vacuum tube buffering circuits. Power for the tubes is supplied to the microphone from a dedicated AC-line operated power supply that connects to the microphone through a 7-pin microphone cable. The power supply provides a high voltage source and independent low voltage sources for the vacuum tube's filaments. An electronic constant current source automatically compensates for any change in the microphone's cable's length and provides the correct voltage and current to each of the vacuum tube's heaters.

1. Always connect the microphone to the power supply before applying AC or turning the supply on. Allow at least ten minutes of warm up time before using the microphone. This is required to give ample time for the vacuum tubes elements to "settle."
2. The stereo outputs of the SF-24V are available at the power supply through a pair of male XLR connectors. OUTPUT 1 corresponds to the upper transducer and OUTPUT 2 corresponds to the lower transducer when the mic is held vertically. Each output is transformer isolated and fully balanced. The SF-24V’s output configuration is as follows: Pin-1 is a shared ground for each output connector; Pin-2 is signal hot (in-phase) and Pin-3 signal cold (reverse-phase).
3. In rare instances, the common ground connection (Pin-1) between the two output connectors can cause a ground loop. This can occur when poorly designed preamplifiers or certain types of patch bays and/or wiring configurations are encountered. If this condition presents itself,

lifting the Pin-1 connection from either connector (preferably done at the input amplifier or patch bay) will usually cure the problem.

3. Be certain that the input channel fader or volume control is set to minimum before plugging in any microphone. Preamplifier gain trim should be set to minimum. Plug the microphone in and activate the power switch. The microphone's electronics will stabilize in a few minutes but it may take up to ten minutes for optimum noise performance to be fully realized.
4. When the microphone becomes operational, bring the two channel faders to 0-dB (unity) and use the preamplifier trims to set the desired level. This technique maximizes the signal-to-noise performance of the preamplifier or console input channel.
5. When disconnecting the microphone, bring the channel faders down then turn off the power supply and unplug the microphone cable ends.

Operation

There are a few important facts that are key to understanding how to use ribbon microphones intelligently.

1. With ribbon microphones, rejection in the “dead” areas is very strong. Due to this directionality, ribbon mics should be placed at 1.3 times the distance normally used with omni-directional microphones, or at approximately the same distance used for cardioid microphones. This method is used to achieve the same ratio of direct to reflected sound.
2. In the horizontal plane, ribbon microphones do not discriminate against the “highs” off axis, nor do they boost them on axis. Therefore, several instruments or vocalists can be placed in front of the microphone without favoring the performer in the center of the group. Several performers can be grouped at both the front and the back of the microphone, with one proviso: since the outputs are out of phase at the front and back of the microphone, cancellation can result if two tenors are placed on opposite sides at equal distances and are singing in unison. Therefore, listen to the feed before committing to it.
3. The Royer model SF-24V is a powered microphone and must be connected to its power supply to operate.
4. Never attempt to “test” the SF-24V (or any ribbon microphone) with an ohmmeter. Damage to the electronics could occur. Always provide adequate protection for your SF-24V (or any ribbon microphone). If the microphone is to remain set up on a stand when not in use, place a “mic sock” (provided) over it until it is to be used. As even light wind can stretch the SF-24V's delicate ribbon elements, do not carry the microphone around without placing a mic sock over it. Failure to follow this commonsense practice may yield a stretched ribbon and compromised performance!

5. Avoid dropping the microphone. An accidental fall to a hard surface could stretch one or both ribbons and, depending on the nature of the fall, possibly necessitating a complete overhaul of the microphone.

Using the RSM-24 Shock Mount Accessory

Description

Your SF-24V is supplied with a Royer RSM-24 suspension type shock-mount accessory designed specifically for this microphone. The RSM-24's specially formulated polymer mounts provide maximum isolation from shock and vibration while holding the SF- 24V securely in place, allowing the microphone to be safely positioned at any angle. The RSM-24's Delrin support tubes are relieved on the inside to minimize contact with the microphone. Teflon strips are bonded to the inside of the Delrin tubes and serve as a means to slide the microphone in and out of the shock. It is normal for the Teflon strips to develop wear marks with repeated use.

Features

The shock-mount easily accommodates standard US microphone stand threads (5/8", 27-thread), and an adapter is provided for European microphone stand threads. The support frame is machined from solid T-6 hard aluminum, then black anodized for long life and a clean unobtrusive appearance. The clutch mechanism provides easy positioning of the shock-mount with minimal pressure. There is also a relief button that enables the clutch handle to be repositioned out of the way. The shock mount has two orientation slots for easy X-Y and M-S positioning. The X-Y slot faces forward and the M-S slot is 45° to the left.

Usage

It is important to use the RSM-24 shock-mount correctly. Making sure that the microphone is inserted properly into the shock mount will minimize any chance of the mic coming loose and will assure proper orientation of the transducer elements. It is also important to make certain that the mic is inserted and removed gently to avoid unnecessary shock to the ribbons.

Properly Inserting the Microphone into the Shock

Examine the shock-mount carefully. Observe that the upper Delrin support tube has one slot inside the tube that faces forward, the same direction as the logo, and one slot that faces 45° to the left of center. The forward slot is used to orient the center, on-axis position of the microphone. This is critical in establishing accurate left/right (X-Y) positioning relative to the sound source. The microphone is inserted in such a manner that the "ROYER" logo on the microphone nestles comfortably in this slot. The 45° left-of-center slot is used to orient the microphone for M-S recording. With the microphone logo inserted in this slot, the upper ribbon element faces forward for the "Mid" signal and the lower ribbon element faces sideways for the "Side" signal. (Figure 1)



Figure 1

Hold the mic by placing the transducer (ribbon element) end in the palm of one hand. While holding the shock mount in the other hand, gently insert the microphone's base into the upper tube first. Be sure that the logo on the microphone aligns itself with the slot in the upper support tube as you feed the mic through. (*Figure 2*)

Continue to feed the microphone through the upper tube and into the lower tube where it will stop when it reaches the lip at the bottom of the lower tube. Do not force or jerk the microphone into position!

Removing the Microphone from the Shock

Removal is simply the reverse process. Firmly grip the microphone with one hand and gently slide it out of the shock-mount. (*Figure 3*) It may help to gently push from the bottom of the microphone while removing it from the lower tube. Again, be sure not to force or jerk the microphone. Ribbon elements are sensitive to abrupt shocks and blasts of air, so be gentle.

Note: If, after a time, body oils or other contaminants make it difficult to insert or remove the microphone from the shock mount, a small amount of talc can be used to "lubricate" the microphone housing. Use talc very sparingly and do not let any of it get into the ribbon transducers, as it can compromise the ribbons' performance.

Connecting the SF-24

The SF-24V comes with a dedicated power supply that operates from line voltages ranging from 100-240 volts AC. A seven-pin cable is used to power the microphone and carry the audio signals from the microphone to the power supply. An IEC business type three-conductor detachable line cord provides power to the supply from an AC mains source. For voltages configurations available outside the United States, adapters are readily available to convert the power cord's male end to the corresponding outlet type as needed. Before using your SF-24V, be certain that the voltageselector/fuse block is configured for the proper voltage.



Figure 2



Figure 3

Power Supply Input Module



Image 1

The power OFF/ON switch and the Power Input Module are located on the rear side of the power supply (*Image 1*). The Power Input Module (*Image 2*) serves multiple functions and is integral to the design of the power supply. It serves as a means to connect and remove the AC mains cable, it houses the AC line fuses, provides a convenient method of voltage changeover, and also serves as an RF line filter. AC power is supplied to the unit via a removable IEC type business machine cable that plugs into the bottom section of the Power Input Module. The power cord must be removed to gain access to the door to change fuses or to set the unit to a different AC input voltage.

Fuse Replacement

Two fuses are used to protect the circuitry of the power supply, one on each side of the mains line. To inspect or replace the line fuses (necessary when changing voltage settings), first remove the power cord. Insert a medium size flat-blade screwdriver into the lip at the top of the module and gently pry the door open (*Image 3*). Be careful not to damage the painted surface of the chassis housing.

The fuses are located inside two carriers, each marked with an arrow pointing to the right. These carriers can be pulled out with the tip of a screwdriver blade or a pair of needle nose pliers (*Image 4*). Once the carriers are removed, the fuses can be pulled out with your fingers. Replacing the fuse carriers is the reverse of removal. They can only be inserted with the arrow facing to the right and they should go in very easily.



Image 2

CAUTION!

Never attempt to bypass a fuse or use one of a higher rating! Not only is this an unsafe practice, but it will void the factory warranty.

Voltage Changeover

The power supply can be set to operate from voltages ranging from 100 to 240 volts AC. For 230V operation, use the 240V setting. A small window at the rear of the Input Power Module will display the current voltage setting. To change operation to a different AC voltage requires repositioning the selector drum within the module. Remove the power cord and open the module door in the same manner as for accessing the fuses. The drum can be removed with a small pair of needle-nosed pliers or the



Image 3

thumb and forefinger (*Image 5*). Rotate the drum so that the desired voltage appears in the window of the module (*Image 6*). Gently push the drum back into position and close the door. The door will snap shut when fully closed. It is important to note that changing voltage settings also requires changing the fuses to different values. The correct values can be found in the specifications section of this manual. There is more information on this subject in the "Power Input Module" section of this manual.

Always connect the microphone to the power supply using the seven-pin cable before applying AC voltage to the power supply. Connect the two XLR audio outputs of the power supply unit to a stereo or two-channel preamplifier. The outputs are identified as OUTPUT 1 and OUTPUT 2. The upper transducer is OUTPUT 1 and the lower transducer is OUTPUT 2. With the microphone positioned upright (logo facing sound source), the UPPER element is RIGHT and the LOWER element is LEFT, as viewed from the observer's perspective.

Since the SF-24 is active, its low impedance output allows for long cable runs with minimal affect on the microphone's performance. High-frequency response losses and noise pickup will be minimal even with cable runs up to several-hundred feet in length.

NOTE:

There are no user serviceable parts in the power supply or microphone. Leave all servicing of your SF-24V to a qualified technician authorized to service this product.



Image 4



Image 5



Image 6

Amplification Considerations

Almost any stereo microphone preamplifier (or pair of mono preamplifiers) with nominal gain characteristics will give excellent results with your SF-24V vacuum tube ribbon microphone. Unlike standard ribbon microphones, which depend on a proper impedance match to deliver optimal performance, the input impedance of your preamplifiers will have minimal affect on the SF-24V's performance because the ribbon elements are loaded perfectly via the microphones' internal electronics. Careful consideration should be given to the quality of the microphone preamplifier. Studio grade preamplifiers usually sound much better than cheaper ones. Headroom, noise floor, transparency and coloration are all factors to consider in determining which preamplifier is suitable for your studio or live applications. Other features are usually

secondary and fall into the category of conveniences or interface capabilities (such as digital or optical outputs).

A good preamplifier should sound natural, with no sign of edginess or excessive noise. Vacuum tube preamplifiers sound warm, yet wonderfully airy and transparent. Do not expect a vacuum tube preamplifier to be as quiet as a solid-state preamp, as electron emissions from tubes tend to convey more “thermal” noise than transistors. Tube preamplifier noise is far less of an issue with the SF-24V than with conventional ribbon microphones because the SF-24V’s high output will override the noise. Transformer coupled preamplifier designs tend to sound punchy and full bodied and offer the added benefit of true electronic isolation. This greatly enhances their ability to interface with other equipment with minimal noise or hum. There are many excellent preamplifiers on the market today.

Choose a preamplifier that fits your budget and offers good performance, but remember that you get what you pay for. If you have the opportunity to audition one or more preamplifiers before you buy one, do so. Microphones and preamplifiers work together as a team and some are just better matches than others. The SF-24V is capable of substantial output signal, especially when used for high SPL applications like drum overheads. It will not overload or produce distortion up to its SPL handling capacity of 130 dB SPL. In actuality, the SF-24V’s ribbons would stretch well before the electronics would reach an overload condition. Due to the high output potential of the SF-24V, it is recommended that the microphone preamplifier you pair it with have a switchable pad to prevent the possibility of overloading the preamplifier’s input stage electronics. Some preamplifiers are more thoughtfully designed than others, with a suitable pad that is placed before the preamp’s active electronics, not incorporated into a “feedback loop” as is sometimes found. The latter design could still produce distortion due to overloading even if the pad were used. Although this is rarely an issue, we felt that it was important to cover the subject. In conclusion, preamplifier coloration is optional and a matter of personal taste. Some people love the effect of coloration while others strive for absolute transparency.

Stereo Microphones and Ground Loops

Some preamplifiers are prone to developing ground loops when used in conjunction with stereo microphones such as the SF-24V. Ground loops can develop in the preamplifier with any stereo microphone regardless of type (i.e. condenser, dynamic, ribbon) or brand. A ground loop manifests itself as unwanted buzz or hum at 60 Hz and/or harmonics of 60 Hz.

The condition is brought on when the left and right transducer elements are plugged into two inputs of a stereo or multi-channel preamplifier. The two male, three-pin XLR connectors of a stereo microphone's cable (or power supply in the case of the SF-24V) usually share Pin-1 as common, so they are grounded to each other at the microphone or power supply. If the grounding scheme within the preamplifier is poorly designed, or the distances to internal ground are too great, a ground loop develops.

You can perform a simple test to check for this condition (preferably done with a pair of headphones to avoid feedback). Plug one side of the stereo microphone into either preamplifier input. Listen to the output of the preamp. All should be quiet except for the mic signal. Now plug the second side into the next preamplifier input. If a noise or buzz develops, you have a ground loop. The ground loop may be very slight or more pronounced, depending on the preamp. Battery powered preamps usually do not exhibit this problem, and neither do well designed, line-operated mic preamps. The simple fix is to disconnect one of the microphone's two Pin-1 ground connections. A better method is to make a small ground-lift adapter fashioned from a male-female XLR barrel adapter. Switchcraft makes a very nice one and it takes less than five minutes to wire it up. Simply connect Pin-2 to Pin-2, Pin-3 to Pin-3, and leave Pin-1 disconnected. Correcting the problem at the preamplifier is preferable, but is often more difficult and/or expensive.

Equalization and Ribbon Microphones

One of the great strengths of ribbon microphones is how well they take EQ. Even with substantial amounts of equalization, ribbons retain their natural, "real" quality. For example, when a lead vocal is being performed on a ribbon microphone, you can boost the upper-end frequencies to the point where the ribbon mic emulates the performance curve of a condenser mic with excellent results. This is not to say that a ribbon microphone can replace a quality condenser mic, but the EQ friendliness inherent in ribbon microphones does allow for an enormous amount of flexibility.

The reason that ribbon mics take EQ so well is their inherent low self-noise, unusually smooth frequency response characteristics and freedom from off-axis coloration. Dialing in high amounts of equalization on condenser or dynamic microphones also means dialing in extra amounts of the microphone's distortion products and self noise: garbage that contributes to an unnatural, unpleasant sound. Because distortion and self-noise are almost nonexistent in ribbon microphones, high levels of EQ can be used without incurring harshness or excessive noise.

Hum, Noise and Mic Orientation

All dynamic microphones, including ribbons, are susceptible to picking up stray alternating magnetic fields. Power transformers (such as those found in guitar amplifiers) and alternating current motors are the most likely sources of hum. In-wall wiring and electrical utility transformers are other likely sources. A well-designed microphone provides shielding to minimize the effects of such stray magnetic radiation. In some cases complete isolation is impossible and the result is usually hum or buzz. Unpowered microphones are more susceptible to hum pickup after the mic, for example through the cable set. With vintage ribbon microphones, which often employ large, bulky magnet structures and are often poorly shielded, the problem can be worse.

The SF-24V reduces this condition because the essential gain is provided at the microphone, negating the need for additional gain to be supplied by the preamplifier. All Royer SF-series microphones (SF-1, SF-12, SF-24, SF-24 Live and SF-24V) are designed to minimize the effects of unwanted radiation by integrating the transducer barrel as part of the magnetic return circuit. They also incorporate toroidal impedance matching transformers, which have a natural ability to repel magnetic radiation.

Unwanted magnetically induced noise (hum) can only come from external sources. Fortunately, simply repositioning a ribbon microphone often gets rid of unwanted noise. If hum is detected, the microphone is in the proximity of an alternating magnetic field. While listening (preferably with headphones) to the mic, move it around. The mic will “find” the noise source quite easily. For example, if you are miking a guitar amplifier and suspect the amplifier’s power transformer may be the source of hum, move the mic around the amp. You will probably find that the hum is louder as you approach the amplifier’s power supply and quieter when you move it away. Eliminating the hum can be fairly simple and requires finding the “null” point of the hum. The “null” point is the position that places the microphone’s magnetic components away from the lines of the noise’s radiation. Slightly rotating the microphone is usually all that is required to cancel out the hum. This is similar to the procedure guitarists use to eliminate hum from single coil guitar pickups: turning around slowly while listening for the hum. There will be a position where the hum disappears completely.

Hum and other noises are often picked up in microphone cables. Since the output of a powered Royer ribbon is 15 to 25 dB higher than with a traditional unpowered ribbon microphone, any noise picked up in the mic cable will be at a corresponding lower level, and hence less likely to be objectionable.

Microphone Techniques

General Tips for Using the Royer SF-24V


The following are good basic starting places for recording with the SF-24V. These positions are known to produce good results, but experimentation is the key to getting the most out of your recordings! Photographs of many of the following techniques can be found on our website -- www.royerlabs.com. It is important to remember that the SF-24V’s ribbon elements can be damaged by wind. When the SF-24V is mounted on a boom stand, be sure the stand is moved slowly. When the microphone is taken down, put it in its box immediately or, if it is to remain in its shock mount, place the mic sock over the transducer end of the microphone. Leaving the microphone out and unprotected invites an early re-ribboning job.

Ensemble Performances

The SF-24V records ensemble performances beautifully. Simply find the point in the room where you hear the best blend of the instruments and room sound and place the microphone there, with its logo facing the performers.

Strings

For stereo recordings of stringed instruments, start by positioning the microphone a few feet off the body of the instrument. Depending on the acoustics of the room, you may want to move the microphone closer to or further from the instrument to add or minimize ambience. For violin, position the SF-24V horizontally, two or more feet above the instrument. For larger string sections, try placing the microphone slightly above the instrumentalists and angled down; a distance of three or four feet will do the job nicely.

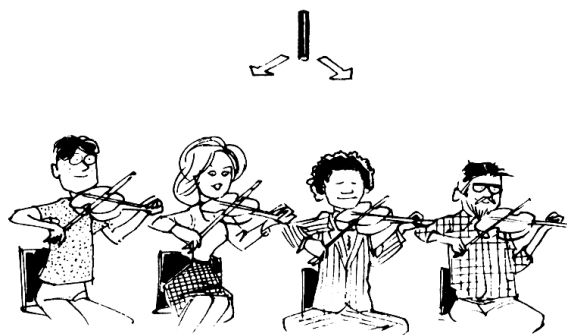

Drum Overhead & Room

Position the SF-24V horizontally over the center point of the kit, two to three feet above the cymbals. For a centered snare drum, aim the Royer logo at the snare. Adjusting the height of the SF-24V by even 6-inch increments will produce dramatic variations in how the cymbals sit with the rest of the kit. Many times an overhead SF-24V is all that is needed for toms and cymbals.

For a single point stereo room mic, position the SF-24 vertically at four to eight feet in front of the kit. Compress to taste for either a very natural drum sound (light compression) or large rock drum sound (heavy compression).

For jazz recordings, EQ is generally not required. For more aggressive drum tracks where cymbals need to sizzle, you can brighten them by adding a few dB of 10K to 12K.



Brass

Brass records beautifully with ribbon microphones. For an overall picture of a brass section within a larger recording session, try placing the microphone at a distance of three to eight feet from the section, two to three feet above the instrumentalists and angled downward. For a solo brass section, position the SF- 24V vertically at a height of four to eight feet and anywhere from five to twenty or more feet from the section.

Close miking brass is a job for the Royer R-121 or R-122 -- we do not recommend close-miking with the SF 24V or any SF-series microphone.

Reed Instruments

Normal working distances are about a foot or two from a solo reed instrument. For multiple instruments, try placing the microphone slightly above the instrumentalists and angled down, at a distance of two to four feet.

Piano

There are several positions that will give excellent results with the piano. Start with a distance of one foot to several feet from the knee of the piano. A more direct “up front” sound will be achieved when the microphone is placed closer to the soundboard. If it is possible to remove the piano lid, the SF-24V suspended horizontally over the soundboard will give outstanding results. If the room sounds good, try positioning the mic 10 to 20 feet from the piano.

If you position the SF-24V somewhere between the soundboard and the open lid of the piano, there will be some amount of reflected sound from the lid. Careful positioning can minimize or accent lid reflections, depending on what sound you’re striving for.

Choir and Orchestra

An SF-24V can produce dramatically good recordings of an orchestra or choir. If possible, position the SF-24 at a height of ten feet or so and a few feet behind the conductor. The wide stereo pickup will reproduce the orchestra or choir with a stunning you-are-there realism. The rear lobes of the figure-8 elements bring the ambient qualities of the recording environment into the recording, adding to the natural feel of the recorded performance.

Percussion

The SF-24V records percussion instruments naturally, without upper frequency hype or low-end boominess. Congas, bongos and the like can be recorded with left/right stereo effect by positioning the mic within a few feet of the instruments. Shakers, bells, triangles and other instruments that are often problematic in the upper frequencies will record naturally and unobtrusively.

Vocal with Acoustic Guitar

For recording a vocal with acoustic guitar, two separate mono tracks are required with little leakage between the tracks. One stand and one horizontally positioned SF-24V can do the job nicely when the two axes of sensitivity are correctly oriented (*see illustration*).

Note:

The SF-24V is not recommended for close-miking loud amplified instruments. Its sensitive ribbon elements were not designed for extremely high SPL applications like close-miked electric guitar. For close-miking high SPL sound sources, ruggedness is a must and we recommend using our R-121 or R-122 ribbon microphones.



Specialized Stereo Recording Techniques

Classic Blumlein Technique

For many years, “coincident” microphone setups have been widely used for picking up sounds in stereo as naturally as possible. The “Blumlein” technique, named for A.D. Blumlein, involves the use of two figure-eight microphones positioned as in the sketch (see Figure 1); so that one faces left and the other faces right, at an angle of 90° (i.e., each displaced 45° from center).

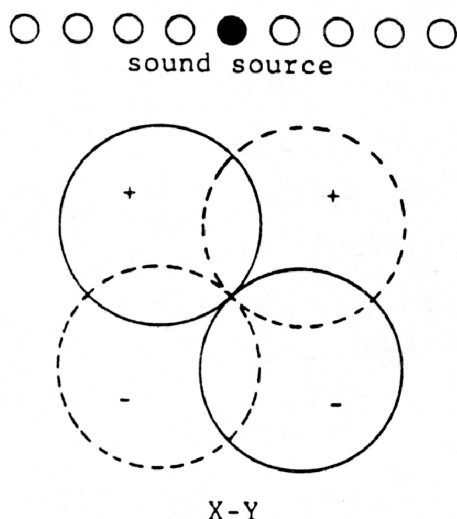


Figure 1

Each microphone ultimately feeds one speaker in a stereo system, and due to the directionality of the microphones, the result is a very well defined stereo image on playback. For classical music, particularly, the reproduction can be very satisfying.

The SF-24V stereo microphone is two identical ribbon microphones in just this Blumlein orientation: if the microphone is placed in front of the performance, with the Royer logo facing the center of the ensemble to be recorded, the microphone will give a stereo recording as per the Blumlein technique. Because of the togetherness of the SF-24V's ribbon transducers, sound will arrive at both ribbon elements at the same time. This means that the two channels

can be summed to mono with no comb filter effects, and room reverberation (undesirable in mono) is cancelled to a surprising degree.

For the sake of clarity, engineers commonly refer to similar stereo miking with cardioid mics as “X-Y.” When figure-8's are used, it is more commonly referred to as “Blumlein” recording.

Mid-Side (M-S) Technique

In the early days of stereo radio broadcasting, the Mid-Side recording technique was developed to allow for 1) simultaneous stereo and mono feeds from the same mic array and 2) electronic manipulation of the width of the stereo image. In M-S recording, one mic faces sideways, one faces forward as shown in Figure 2, and they are connected as shown in Figure 3.

With the SF-24V's logo facing the center of the performance, the mic is positioned for X-Y recording. Rotating the SF-24V counter-clockwise by 45° positions it for MS recording.

By inserting your SF-24V with the logo in the left slot of the RSM-24 shock mount (see *Using the RSM-24 Shock-mount*, page 7), then facing the shock-mount's logo directly at the center of the performance, the microphone will be rotated 45° counterclockwise and correctly positioned for M-S recording. With the SF-24V in a vertical position, cable end down, the upper ribbon element faces the center of the performance and is the “mid” microphone, and the lower ribbon

element is at 90° to the performance and is the “side” microphone. If the microphone is to be mounted upside down, make the proper adjustments in your wiring orientation.

If the outputs of the mid and side elements are made equal using gain controls, the stereo pickup will be similar to that of two microphones placed as a Blumlein X-Y pair, delivering a wide stereo image. As you reduce the level of the “side” element, the width of the stereo image will narrow until, with the side element turned all the way down, you have just the “mid” element panned center and giving a mono pickup. If the outputs of the “mid” and “side” elements are recorded on separate tracks, the electrical connections shown in *Figure 3* can be made at the mixer outputs and the adjustment of the stereo separation can be done during mixdown, rather than during the actual recording.

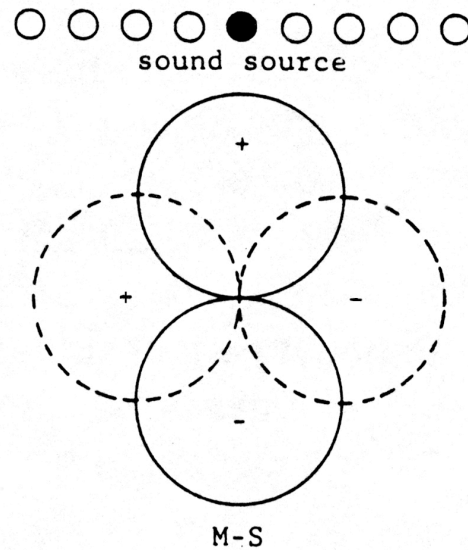


Figure 2

Space does not permit a fuller discussion of the M-S intensity stereo format, first described by Alan D. Blumlein over 50 years ago. We suggest the following reading on the subject:

W. Dooley & R. Streicher
“M-S Stereo: A Powerful Technique for Working in Stereo”
J. Audio Eng. Soc., Vol. 30 pp.707 (1982 Oct.)

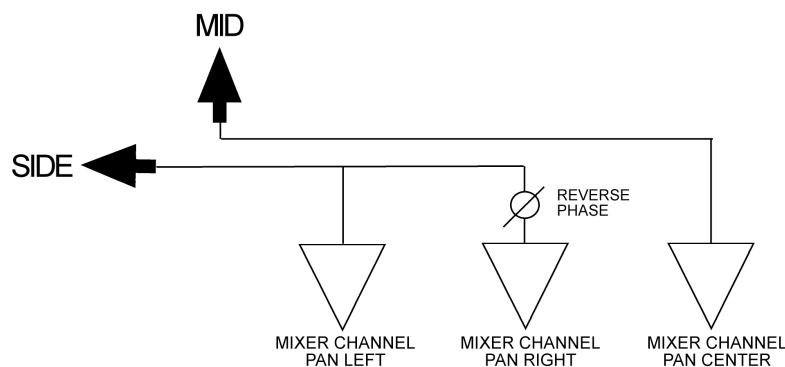


Figure 3

Care and Maintenance

The SF-24V is a solidly built, precision instrument. Following a few commonsense rules is all that is required to ensure proper operation of this microphone.

1. To avoid transducer damage, do not expose the microphone to severe shock or vibration. If the microphone is accidentally dropped, test it to see if damage has occurred before returning it to service. Low output or a dull sound in one or both transducers would indicate a stretched ribbon.
2. Do not expose the microphone to direct blasts of air or strong air currents. Use a windscreen or suitable blast filter when close miking a vocalist or certain types of wind instruments. Popping does not necessarily damage the ribbon element, but it may produce unacceptable preamplifier overload and could cause damage to speaker systems.
3. Do not expose the microphone to liquids or caustic smoke.
4. Do not expose the microphone to strong alternating electromagnetic fields, i.e. the power transformers in amplifiers, or a hum may result.
5. Use a soft cloth to clean the microphone body. A small amount of denatured alcohol can be used to remove fingerprints and other stains. Use WD-40® or mineral oil to protect the finish.
6. Keep metal filings away from the microphone at all times. The SF-24V's powerful magnets can attract minute ferrous particles into the ribbon transducers, compromising the performance.
7. When not in use, store the microphone in its protective carrying case. If the microphone is to remain set up on a mic stand between sessions, cover it with its mic sock (provided with your SF-24V).
8. Leave disassembly of the microphone to a trained technician. There are no user-serviceable parts inside the microphone or power supply.

Care for the Satin Nickel Finish

The SF-24V's standard dull satin nickel finish is durable and easy to maintain. Simply use a soft cloth to clean the microphone body. If needed, a small amount of denatured alcohol can be used to remove fingerprints and other stains.

Care for the Optional Optical Black Finish

The SF-24V's optional optical black finish is a surface treatment designed to refract light rather than reflect it. To maintain the finish, it is good practice to massage the microphone gently with a lint free cloth treated with a few drops of light machine oil or WD-40® (apply the oil to the

cloth, not to the microphone). Be very careful whenever working around the transducers to avoid contamination of the ribbon elements.

Care for the SF-24V's African Padouk Presentation Case

The SF-24V's handcrafted presentation case is milled from two matching pieces of African Padouk. To best protect the case, minimize direct and prolonged exposure to sunlight, heat, and moisture. As the case ages, it will take on a darker, more lustrous hue. To maintain and beautify the case's finish, we suggest wiping it with a thin coat of boiled linseed oil or Tung oil (available at most home improvement stores) once a year. Use the oil sparingly and apply with a soft cloth. Paste wax may also be used for a high luster finish.

CAUTION!

Due to the transducer's powerful magnets, keep recorded tapes, spring-wound watches and personal credit cards with magnetic coding away from the microphone to prevent possible damage.

Features


- Excellent stereo imaging and separation in one microphone
- Smooth, wide frequency response
- Vacuum Tube electronics offer greatly enhanced output and a constant, optimized impedance to the ribbon element
- X-Y, M-S, or mono recording from one microphone
- Extremely low residual noise
- Ribbon elements are unaffected by heat or humidity
- Absence of high-frequency phase distortion
- Excellent phase linearity – even off axis
- Equal sensitivity from front or back of microphone
- Consistent frequency response regardless of distance
- Compact size

Specifications


| | |
|--------------------------------------|--|
| Acoustic Operating Principle: | Electro-dynamic pressure gradient with active electronics |
| Polar Pattern: | Symmetrical Figure-8 |
| Generating Elements: | Two 1.8-micron aluminum ribbons |
| Frequency Response: | 30 HZ – 15,000 HZ \pm 3 dB |
| Sensitivity: | > -38dBv Ref 1 v/pa |
| Self Noise: | <18dB |
| Output: | Transformer balanced |
| Output Impedance: | 450 Ohms @ 1kHz |
| Recommended Load Impedance: | 1500 Ohms or greater |
| Maximum SPL: | > 130 dB |
| Vacuum Tubes: | (2) type 5840-W (Raytheon) miniature with wire leads |
| Output Connectors: | Two 3-Pin Male XLR connectors |
| Power Requirements: | 110, 120, 220, 240-volts AC 50-60HZ (see manual) |
| Mic Dimensions: | 270mm X 39mm (base) X 25mm (top) (10 5/8" X 1.5" wide (base) X 1" wide (top) |
| Microphone Weight: | 572 grams (20.2 ounces) |
| Shipping Weight: | 21 LBS |
| Finish: | Dull Satin Nickel |
| Optional finishes: | Optical Black Chrome and 18K Gold |
| Accessories: | Camera style carrying case, dedicated power supply, protective presentation case for the microphone, protective mic sock, 20-foot shielded 7-conductor cable RSM-24 shock mount, IEC AC-line cord. |

To learn more about Royer products and their usage, visit our website at www.royerlabs.com.


Polar Pattern

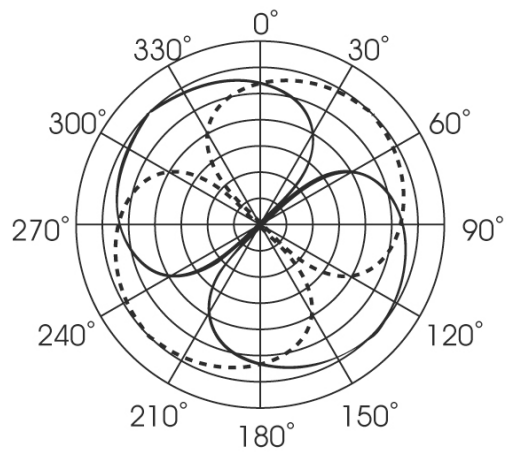


Frequency Response

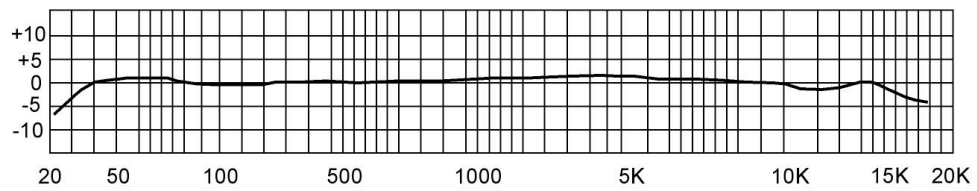

Wiring Diagram

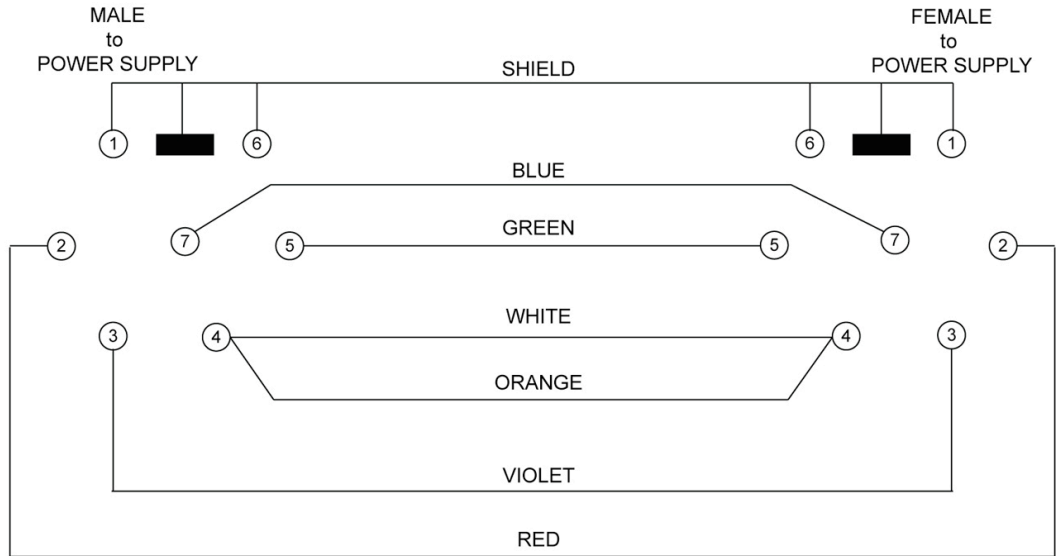

Cable Type: MOGAMI 3172

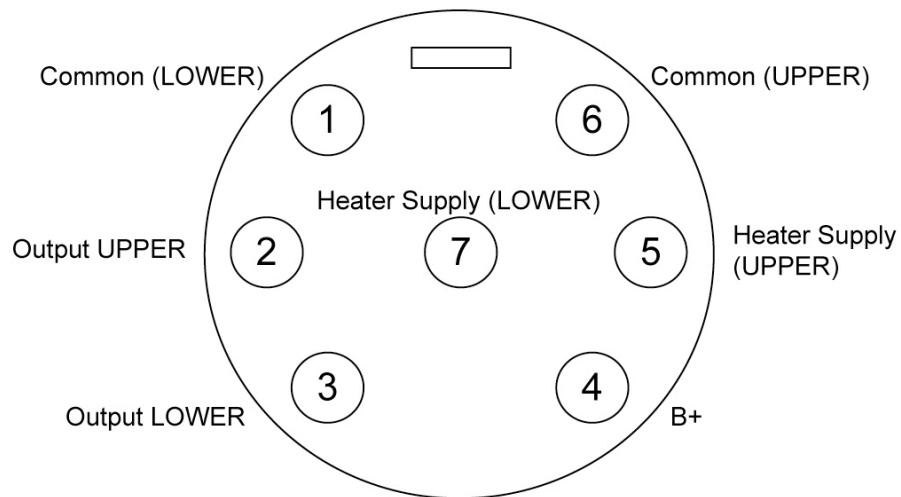

Warranty

PLEASE RETAIN YOUR ORIGINAL BILL OF SALE AS YOU WILL NEED TO PRESENT IT SHOULD YOU REQUIRE SERVICE UNDER THIS WARRANTY.

TO VALIDATE THIS WARRANTY, THE REGISTRATION CARD AND A PHOTOCOPY OF THE SALES RECEIPT FROM AN AUTHORIZED ROYER DEALER MUST BE ON FILE WITH ROYER LABS.

Royer Labs hereby warrants all Royer SF-series microphones with the following terms and conditions.

WARRANTY PERIOD

| | |
|---------------------------|--------------------------|
| Body fit and finish | Lifetime |
| Transducer frames/magnets | Lifetime |
| Transformers | Lifetime |
| Vacuum Tube | 10 years Parts and Labor |
| Cables & Cable Sets | 2 years Parts and Labor |
| Shock Mount Accessories | 2 years Parts and Labor |
| Ribbon Element | 1 year Parts and Labor |

SCOPE OF WARRANTY:

From the date of original purchase and for the respective periods specified above, Royer Labs agrees to repair, at its sole expense, all Royer Labs products which are defective in material and workmanship.

EXCLUSIONS:

This warranty does not cover the following:

1. Defects or damage caused by accident, fire, flood, lightning or other acts of nature.
2. Defects or damage caused by abuse, misuse, negligence or failure to observe the instructions contained in the owner's manual furnished at the time of original purchase.
3. Damage caused during shipping or handling.
4. Products that have had their serial numbers altered or removed.
5. Products purchased in "AS-IS" (used) condition.
6. Products that have been altered or repaired by anyone other than a factory authorized service station.

ROYER Labs
2711 Empire Ave.
Burbank, California 91504
Telephone 818.847.0121
Fax 818.847.0122
www.royerlabs.com